

SURVIVAL CRAFT INTERNAL LIGHT TYPE "RESCUE-DAN R.EXT"

Operation, Maintenance & Service Instructions

Operation

Pull the activation pin out of the socket and the light will illuminate.

In case of an inflatable life raft the lights is provided with a cord attached to the pin, so the pin automatically during inflation will be pulled away from the light.

The light can be turned off by using the spare pin attached to the light.

Maintenance

The power source is maintenance free lithium battery with a shelf life of min. 5 years.

The battery pack is separate from the lamp and shall be replaced after 5 years from production date. The Light unit (lamp) must be replaced together with the battery and at the latest after 6 years from production date.

The expiry (replacement) date is indicated on the label by month and year.

Service intervals

It is recommended to activate the light approx. 1 minute during the raft service.

The light can be turned off during service by using the spare pin.

Inspect the light for deterioration and replace it found faulty.

Safety Precautions

- Do not dismantle the light assembly.
- Do not make any external electrical connections other than connecting lamp to battery.
- Do not recharge.
- Do not incinerate.
- Store between -30°C to +65°C